

PLEXTALK® POCKET: Pocket Guide

1.Keys



2. Description of the PLEXTALK Pocket


- Speaker and microphone are at the top front.
- Below the speaker and microphone at the right side is the power key and on the left side the record key.
- In the middle of the device is the play/stop key surrounded by the navigation keys and, on the outer side, with function keys.
- A numeric keypad is on the front bottom of the Pocket.
- On the top edge are the headphone and line-in jack.
- On the right side edge are the volume adjustment and the key lock.
- On the bottom edge are the AC-adaptor and the mini-USB connection.
- On the left side edge is the SD card slot.

3. Key Description

Power Key: Switch the Pocket on and off by pressing for 2 seconds. While the Pocket is on, briefly press the power key to select the sleep timer with intervals from 15 minutes to 2 hours.

Record Key: Briefly press to start the recording mode. By pressing again, the unit starts recording on the SD card. The recording can be paused by pressing the record key or finished by pressing the Play/Stop key. The recording on the SD card is recognized as a DAISY book. Holding it pressed enables the recording of voice memos which are stored in the local memory of the Pocket.



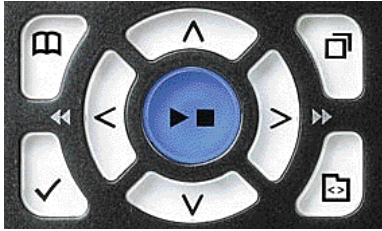

Play/Stop Key: To start and stop the playback and also to confirm entries in the menu option.

Arrow Keys: To select the level, use the up and down key. Once the level is determined, use the left or right key to select. Example: In a DAISY book, select a page level by using the up or down key, i.e. a book with page numbers. With the left key, you can go one page back, with the right key you can go one page forward. For audio, you can go to the previous track or the next track. In a book or audio title, one can go back in time by holding the left key and forward by holding the right key. The time skips are announced, i.e., the audio tracks are announced.

Bookmark Key: Press once to go to a bookmark. Press twice to create a new bookmark. Press three times to remove a bookmark.

Menu Key: Press to activate the menu. You can choose from edit, recording settings, playback settings, bookmark, voice memo, media management and, system settings. Holding the menu key enables the key describer mode.

Title Key: You can select the SD card, USB, or voice memo. You can select a title by using the left or right key on the selected media. Using the up or down key, you can select a title by category, folder or title.

GoTo Key: Navigate directly to a page or heading in a DAISY book, to a track or an album in audio or to a percentage in a text. This key needs to be followed by a number and the Play/Stop key.

Numeric Keypads

Speed Setting: Press the 1 key once to set the speed, then the up or down key to increase or decrease the reading speed.

Tone Setting: Press the 1 key twice to set the tone, then the up or down key to increase or decrease the tone.

Information: With the 5 key, you can get information about the battery, current title and so on. By holding the 5 key, the time and date are announced.

Backup: Press the 9 key to start backup process from USB media to SD card or vice versa. You need to select a title to back up.



Help Function: Press the 0 key to activate the help function. This is the built-in manual which you can navigate through as a DAISY book

Enter: Press the hash key to confirm entries in title selection, bookmark, the menu option and so on.

Cancel: Press the star key to cancel entries in title selection, bookmark, the menu option and so on.



4. Examples

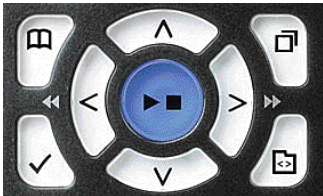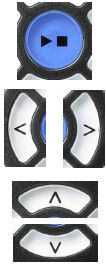

To play a DAISY book from the SD card

- Insert the SD card into the Pocket.
- Press the Play/Stop key and the book starts to play.
- If you want to play another DAISY book in the SD card, press the Title key and select the title by the left or right key.
- Press the Play/Stop key to stop the playback.
- Press and hold the right key to forward in time.
- Press and hold the left key to rewind in time.
- Press the up or down key to select the navigation level then left or right key to move back or forward in the selected level

To play audio

- Press the title key, then the left or right key to select the audio followed by the Play/Stop key. And use the left or right key to select the track.
- You can also go directly to an album or track. Press the GoTo key and press the 7 key then press the Play/Stop key to play the 7th track in an album.

To play plain text file or MS Word DOC file

- Copy the file from a PC system to the SD card.
- Select the text file with the Title key.
- Press the Play/Stop key to play the file.
- The text to speech synthesizer reads the file. This can be done with either of the 2 voices, set in the System Settings of the menu option.
- You can navigate the file by sentence, word, character and so on when pressing the four arrow keys.

To record a voice (class, conference, etc.)

- Press the Record key briefly. This is the test recording mode.
- You can set the recording parameters by use of the menu. To start with the default setting, press the Record key again. The sound is recorded on the SD card.
- To pause the recording, push the Record key again.
- To stop the recording, press the Play/Stop key.



To create a voice memo (max 1 minute for one voice memo)

- Hold the Record key and speak into the microphone. Voice memos are saved in the internal memory of the Pocket.



To make a backup from the SD card to USB flash memory

- Connect the USB flash memory using the short USB cable delivered with the Pocket.
- Select the title to backup on the SD card.
- Press the 9 key to start the backup. Follow the audio instructions.



To make a backup from USB flash memory or CD player to the SD card

- Select the USB device by using the title key.
- Select the title on the USB device.
- Press the 9 key to start the backup to the SD card and follow the audio instructions.



5. Menu Hierarchy

EDIT:

- Set heading
- Cancel heading
- Remove section

RECORDING SETTINGS:

- Select recording mode
 - Default
 - Conference
 - Audio
 - Analogue cassette
 - Radio
 - Custom
- Then select sound quality from below.
 - PCM 44.1kHz stereo
 - PCM 22.05kHz mono
 - MP3 256kbps 44.1kHz stereo
 - MP3 128kbps 44.1kHz stereo
 - MP3 64kbps 44.1kHz mono
 - MP3 32kbps 22.05kHz mono
- Turn guidance on or off when recording
 - Guidance on
 - Guidance off
- Select external audio input jack
 - Microphone mode
 - Line in mode
- Auto gain control
 - Auto gain control on
 - Auto gain control off

PLAYBACK SETTINGS (DAISY and Text):

- Shuffle and repeat settings
 - Standard play
 - Repeat title
- Reading audio file name
 - Read audio file name
 - Read audio track number

PLAYBACK SETTINGS (Audio):

- Shuffle and repeat settings
 - Standard play
 - Repeat track
 - Repeat album
 - Repeat entire albums
 - Shuffle repeat
- Reading audio file name
 - Read audio file name
 - Read audio track number

BOOKMARK:

- Playback setting for Voice Bookmark
 - Voice Bookmark on
 - Voice Bookmark off
- Clear all bookmarks in current title

VOICE MEMO:

- Delete the selected voice memo
- Delete all voice memos

MEDIA MANAGEMENT:

- Media title information
- Delete SD card
- Create a new title
- Delete the selected title (album)
- Prepare for editing
- Build book
- Network Folder

SYSTEM SETTINGS:

- System properties
 - System version
 - Serial number
 - Installed key (if obtained.)
- Select guide volume
- Select the text to speech voice
 - Voice 1
 - Voice 2
- Select the waiting sound
 - Waiting sound 1
 - Waiting sound 2
 - No waiting sound
- Select the key press confirmation sound
 - Key press confirmation sound on
 - Key press confirmation sound off
- Set the system date and time
- Set the text to speech pitch
- Network setting
 - Confirm Network setting
 - Load Network setting
- Initialize all settings to default

PLEXTALK[®]
ASSISTIVE TECHNOLOGY DEVICES